



# Non-Coin Hockey

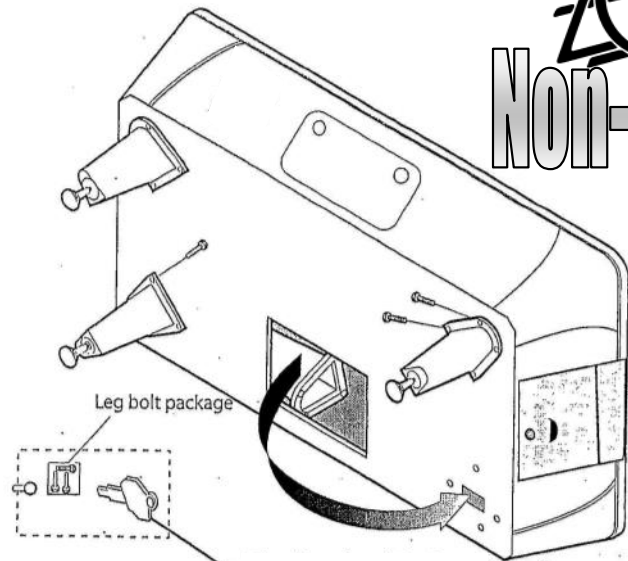

Use the access/service door key to remove the legs from the cabinet. The leg bolt pack will be stapled to the inside of the access door.

Goal end and access/service door keys can be found on the playfield pad, under the cardboard

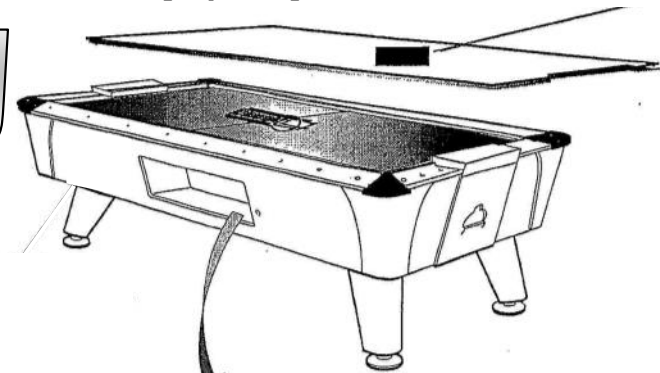

2 Pucks, 2 Mallets, 2 Sandpaper discs and Instructions are found inside the Service Door area.

See pages 8-9 for detailed leg installation and setup instructions.

**GOAL END AND ACCESS/SERVICE DOOR KEYS ARE ON THE PLAYFIELD PAD, UNDER CARDBOARD**  
**LEG BOLTS ARE SECURED TO THE INSIDE OF THE TRAP DOOR**  
**LEGS ARE SHIPPED INSIDE YOUR TABLE (except Dynamo Short Shot® )**  
**PUCKS, MALLETS, SANDPAPER AND SETUP INSTRUCTIONS ARE INSIDE THE SERVICE DOOR**

Missing items? Contact 800-248-2837 option #2 during office hours—[techhelp@valley-dynamo.com](mailto:techhelp@valley-dynamo.com) at any time