



## Dynamo Hockey

### 7.2 Program Configuration

#### Change the default values

User should hold down the VALUE button (SW2) for five seconds, the scoring display will count down from five and display the letters for the first parameter.

Release the VALUE button after the countdown and the menu system has been accessed. Change values for each setting using the VALUE (SW2) button. Press the ACCESS (SW1) button to move to the next configurable setting. When all configurable values have been set, the program initiates the setup routine and the values have been stored.

#### Return to Software Defaults

Hold down the VALUE button when powering up the game.

The LED display flashes "FP" (Factory Parameters).

After "FP" has flashed, the display continues into startup mode.

Values are now set to factory defaults.

- **SC**            **Maximum score (for a player) per game**
  - Default Value 7
  - Minimum Value 2
  - Maximum Value 9
  
- **LE**            **Maximum time in minutes a game will run**
  - Default Value 7 minutes
  - Minimum Value 0 (time off, score setting determines game length)
  - Maximum Value 16 minutes
  
- **CC**            **Coins per credit**
  - Default Value 6
  - Minimum Value 1
  - Maximum Value 40
  
- **PC**            **Plays per credit**
  - Default Value 1
  - Minimum Value 1
  - Maximum Value 3
  
- **CS**            **LED Color Cycle Speed (used only on LED equipped tables)**
  - Default Value 1
  - Minimum Value 0
  - Maximum Value 5
  
- **CB**            **LED Brightness (used only on LED equipped tables)**
  - Default Value 2
  - Minimum Value 0
  - Maximum Value 5
  
- **PG**            **Puck Gate Mode (not currently used)**
  - Default Value 0
  - Minimum Value 0
  - Maximum Value 1