





VALLEY ALUMINUM/NAIL IN MOLDING TO T-MOLDING UPDATE

USE A 3/32 SLOT CUTTER
WHILE THE EXAMPLE USED IS A
BALL VIEW DOOR, THIS SAME
PROCEDURE APPLIES TO THE
OTHER OPENINGS IN A VALLEY
TABLE (PUSH CHUTE,
COLLECTION HOUSING,
TRIANGLE HOUSING)

-----MUST WEAR SAFETY GLASSES-----


1. CAREFULLY REMOVE THE EXISTING TRIM FROM THE DOOR
2. REMOVE THE (2) LOCKS FROM THE DOOR
3. PLACE DOOR ON A NON-SLIP SURFACE OR SECURELY CLAMP TO A SOLID SURFACE

6. INSERT THE REPLACEMENT MOLDING INTO SLOT BY TAPPING INTO PLACE
7. TRIM TO PROPER LENGTH
8. RE-INSTALL LOCKS, NOTING KEY ALIGNMENT

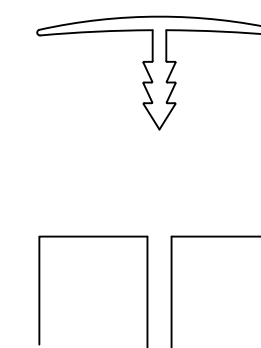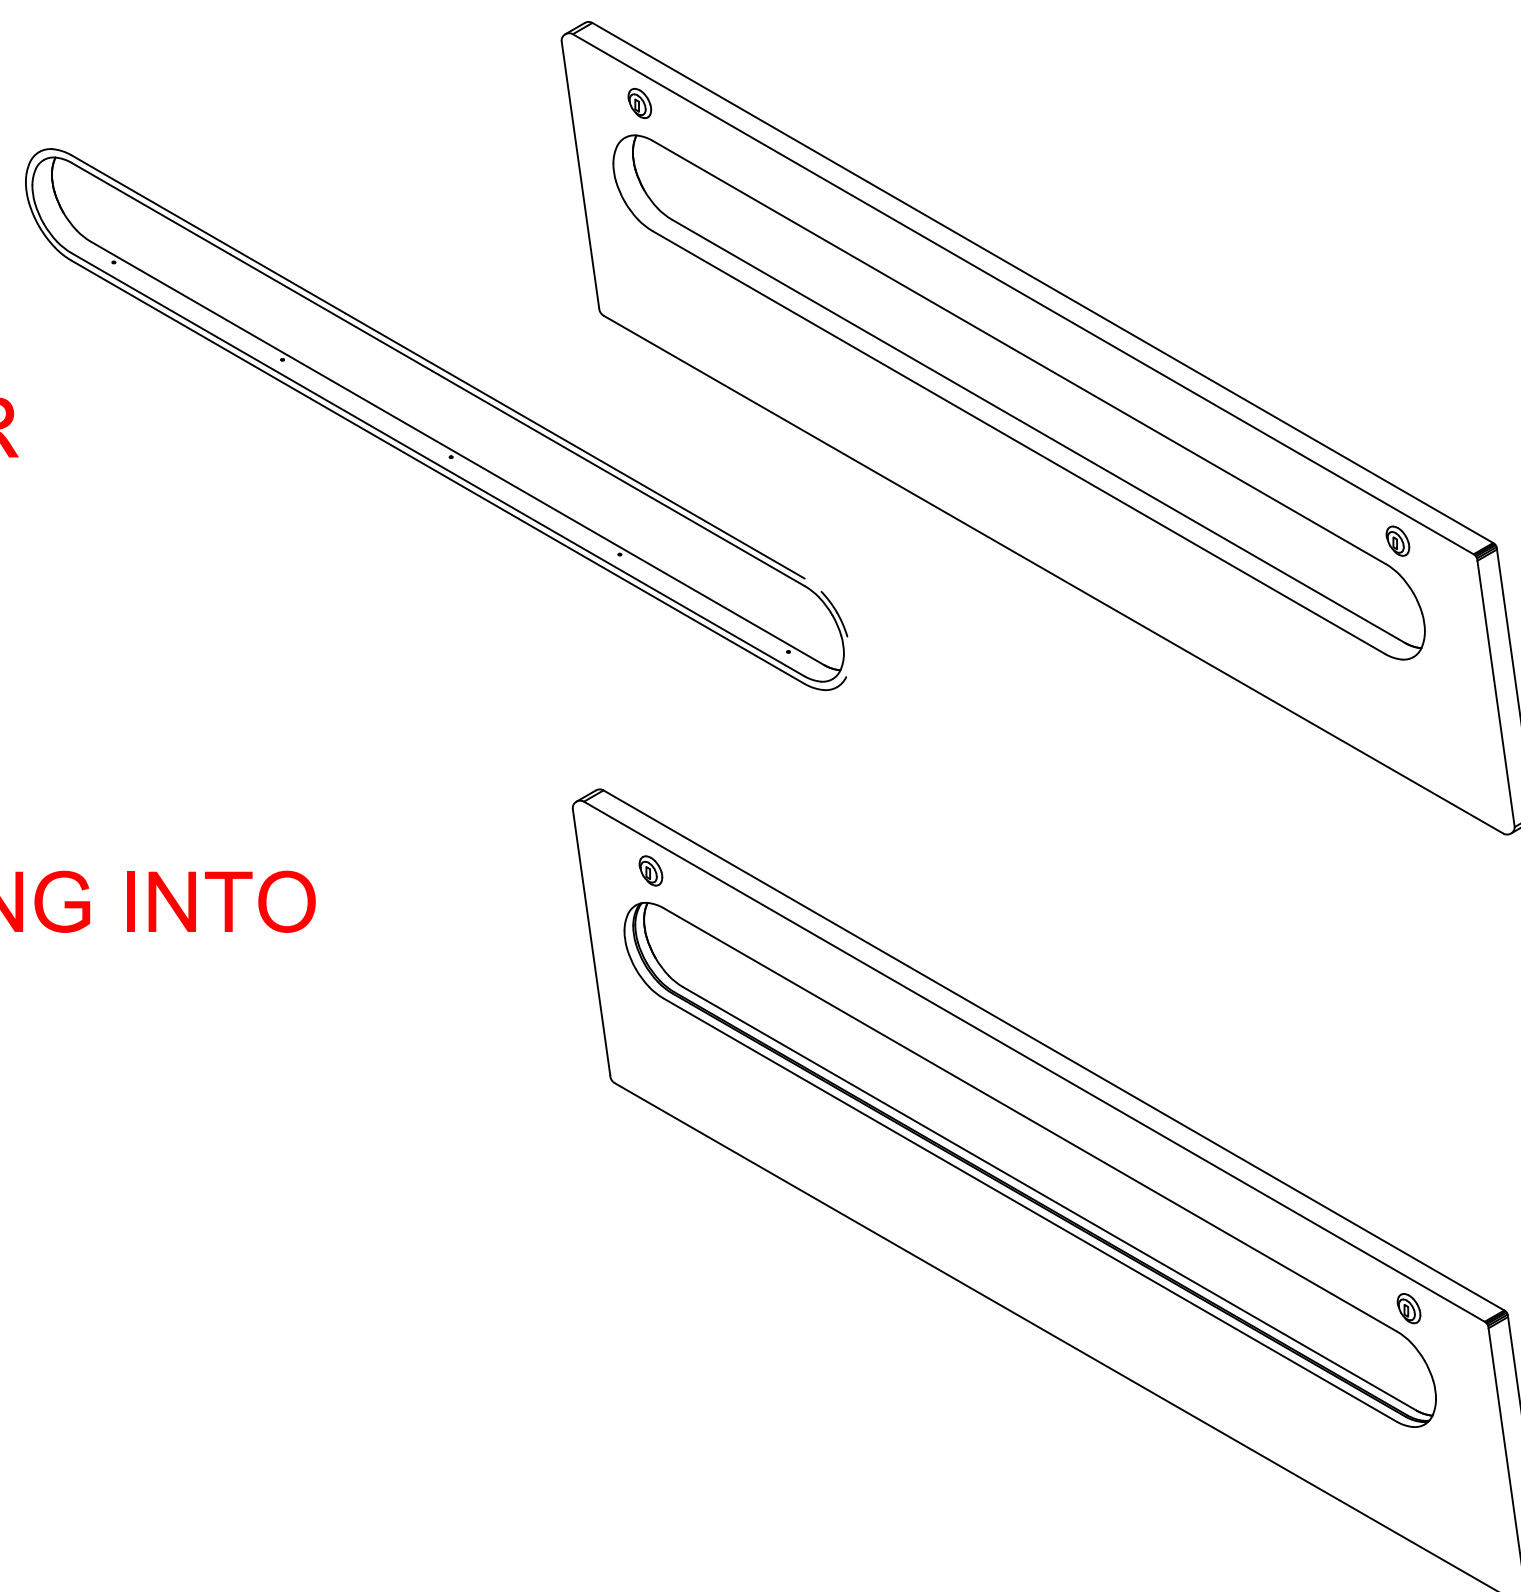

-----MUST WEAR SAFETY GLASSES-----

4. MAKE CERTAIN THE SLOT CUTTER IS SET TO BE CENTERED ON THE THICKNESS OF THE DOOR.

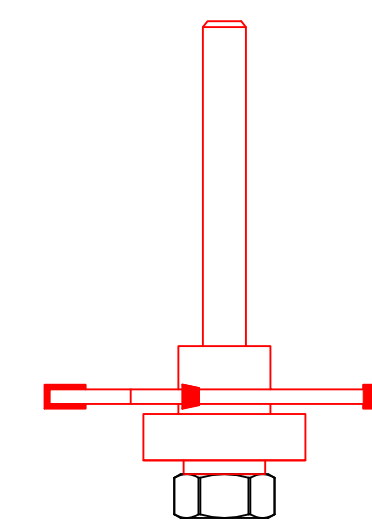

-----MUST WEAR SAFETY GLASSES-----

5. CAREFULLY CUT THE SLOT INTO THE DOOR

